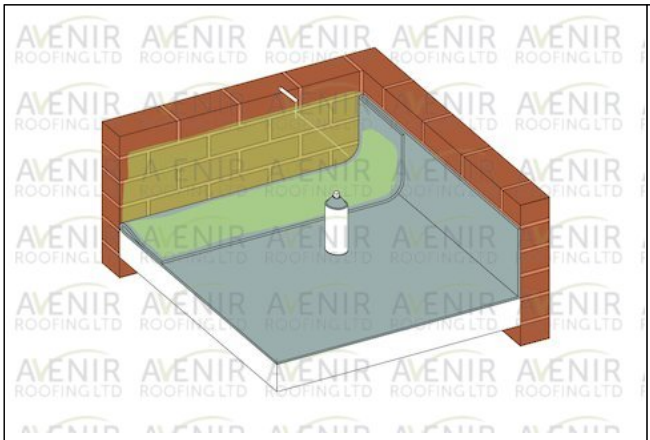
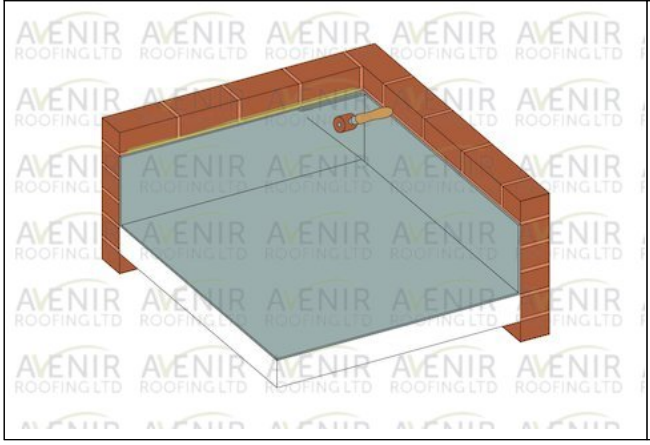
Internal Corner

A how-to guide to installing an internal corner.

	**Step 1** Adhere one of the upstands and apply contact adhesive to the remaining rubber and upstand as shown. Draw a 45-degree line from the corner outwards.
	**Step 2** Once dry, mate the EPDM as shown, up to the line. Fold the remaining section of rubber to form a neat triangular flap that will neatly dress into the internal corner.
	**Step 3** Apply primer with a scrubber pad and handle, allow to dry.
	**Step 4** Mate the surfaces together and roller.